
 











 






NPC Nurit 3020/3010**

~ Retail ~
Quick Reference Guide

Duplicate	Card Verify	History Report
<p>Press </p> <p>Select 1, 2 or 3 (See below)</p> <p>To print Last Transaction</p> <p>Press</p> <p>To print any Trans in batch,</p> <p>Press</p> <p>Then choose the card type 2, 3 or 4, And enter the Transaction # t</p> <p></p> <p>To Print Last Trans with Signature.</p> <p>Press</p>	<p>Press</p> <p>Swipe Card or Account +</p> <p>Exp. Date +</p> <p>Amount +</p> <p>Card Present ? Press  for YES</p> <p>-OR-  for NO</p> <p>Enter Zip Code +</p> <p>Street Address +</p> <p>Enter CVV2, CVC2 or CID Code + </p> <p><small>*Will prompt if card is not present. If code is not known or not present, press Enter and choose the appropriate numeric response.</small></p>	<p>Press </p> <p>Press  For REPORTS</p> <p>Press  For HISTORY REPORT</p> <p>Enter the 6-digit date needed for beginning of Report or press Enter for date on screen.</p> <p>Enter the 6-digit date needed for end of Report or press Enter for date on screen</p> <p>Select 1 for Totals or 2 Per Batch</p> <p>Follow display prompts to select EDC type, Card and Trans Types needed on Report or press ENTER 3 times for ALL</p>
Batch Review	Current Report	Settle Batch
<p>Press </p> <p>Use the Forced key to select Credit, Debit, Cash or Total. Then press </p> <p>Review the transactions in order of Transaction # using the Forced key to go to the next transaction and the Return key to go to the previous. The Void Key will allow you to review additional transaction data such as card type, expiration data, approval #, and Invoice number.</p>	<p>Press </p> <p>Press for Reports</p> <p>Nurit will print a detailed Report of all Transactions</p>	<p>Press </p> <p>PRESS for BATCH </p> <p>Press for all Hosts </p> <p>-OR-</p> <p>Press For NPC, then </p> <p>Press To Close Batch </p>

- Use Numbers Only For Street Address
- Terminal will Prompt for Clerk ID and Invoice Number if those options are activated.
- NOTE: CVV2, CVC2 and CID codes are often requested for manually entered transactions. These codes appear on the back of the card as the last 3 digits on the right side of the card.



NPC Nurit 3020/3010**

~ Retail ~

Quick Reference Guide

Manual Credit Card Sale	Credit Card Refund	Voids
Account # + <input type="button" value="ENTER"/> Exp. Date + <input type="button" value="ENTER"/> Amount + <input type="button" value="ENTER"/> Card Present ? Press <input type="button" value="ENTER"/> for YES -OR- for NO Enter Zip Code + <input type="button" value="ENTER"/> *Street Address + <input type="button" value="ENTER"/> *Enter CW2, CVV2 or CID Code + <input type="button" value="ENTER"/> <small>If code is not known or not present, press Enter and choose the appropriate numeric response.</small> <small>* These items above prompt if the card is not present. Discover cards will prompt when the card is present also. The AVS and CVV2 or CID response will Print on the receipt.</small>	Press <input type="button" value="Return"/> Account + Exp. Date + Amount +	Press <input type="button" value="Void"/> <small>Press Void once to Void a Sale, twice to Void a Return, or 3 times to Void a Forced Sale.</small> Account + <input type="button" value="ENTER"/> Exp. Date + <input type="button" value="ENTER"/> Amount + <input type="button" value="ENTER"/> <small>The Terminal will look for a trans that matches the data entered to VMD, w it will say. "Trans not found" if no march.</small>
Credit Card Sale	Debit Sale	Forced Sale
Swipe Card or see Manual Credit Card Sale above Amount +	Press <input type="button" value="ENTER/ Paymt"/> <small>Until DEBIT appears on the screen</small> Swipe Card + Amount + Cash Back + Press <input type="button" value="ENTER"/> if no Cashback PIN # + <input type="button" value="ENTER"/> <small>Terminal will print a receipt, press <input type="button" value="Alpha/ Copy"/> then <input type="button" value="ENTER"/> for additional receipt</small>	Press <input type="button" value="Forced"/> Swipe Card + <input type="button" value="ENTER"/> Account+ <input type="button" value="ENTER"/> Exp. Date + <input type="button" value="ENTER"/> Amount + <input type="button" value="ENTER"/> Enter Auth No. + <input type="button" value="ENTER"/> <small>Use the 6 digit Authorization # previously obtained for this trans. The receipt will say "Ticket Only"</small>

** The Nurit 3010 is a wireless terminal using a radio antenna and battery pack. The terminal will shut itself off for more than 1 minute. This conserves the battery power. To "wake" the terminal up, press . The terminal may say "Radio Init. Watting" while it registers with the network. Once the terminal has registered, the display should say "Credit... Sale, Account." This means it is ready to process cards. To charge the battery, plug the power pack into the terminal and into a standard power outlet. A battery status display is in the lower left hand corner of the terminal screen. A radio signal strength appears in the right hand corner of the screen, once the terminal has registered. A signal of at least 14 is recommended.